

Stand for JT heater

JT-SE

Only compatible with JT-D Hot Air stations.

It perfectly holds the JT-TA tools when not in use. Its **adjustable** tool holder suits your work position and the **quick nozzle changer** allows to switch between nozzles without interrupting your work.

Auto-stop function for safety The tool automatically stops blowing hot air when returned to the stand. This prevents potential incidents such as overheating, you save power and lengthen the heater's life.

3 modes of activation Using the station menu, the operator can choose the mode of start blowing hot air: Auto-start (just lifting the tool), pressing the tool's button or using the P-005 Pedal instead of the stand.



Auto-stop function



Adjustable stand



Nozzle changer



Specifications

Included	Nozzle extractor
Net weight	1,23 kg (2.72lb)
Package weight	1,52 kg (3.34lb)
Package dimensions	342 x 155 x 120 mm (13.46 x 6.10 x 4.72 in)

Connectables

Connectable tools

100V/120V - Heater Hose Set
JT-T1A

230V - Heater Hose Set
JT-T2A



Documentation

Manuals	JT-SE / TE-SE Manual
Exploded View	EXPLODED_JT-SE